

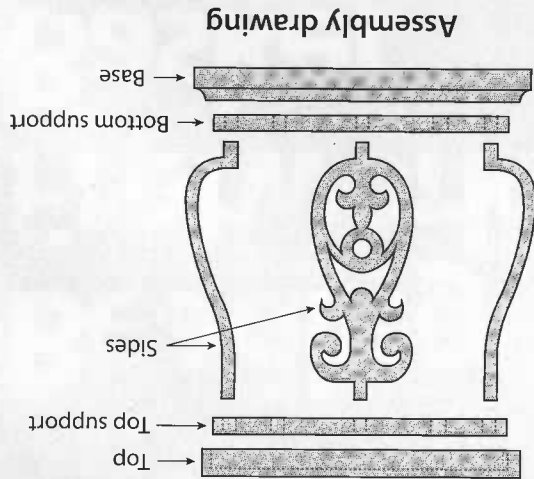
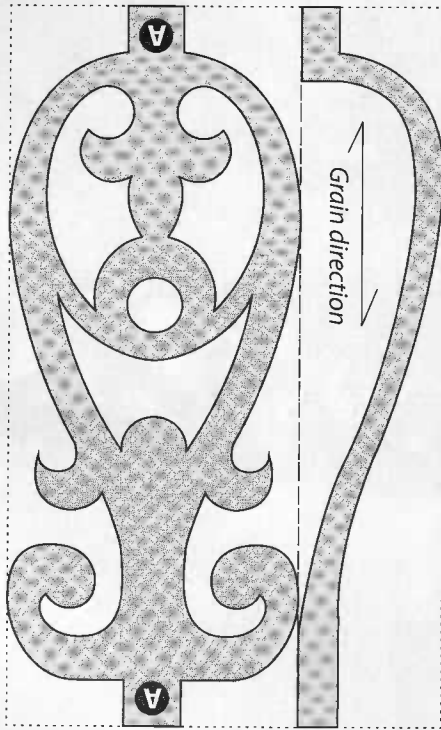


Turkish votive holder patterns

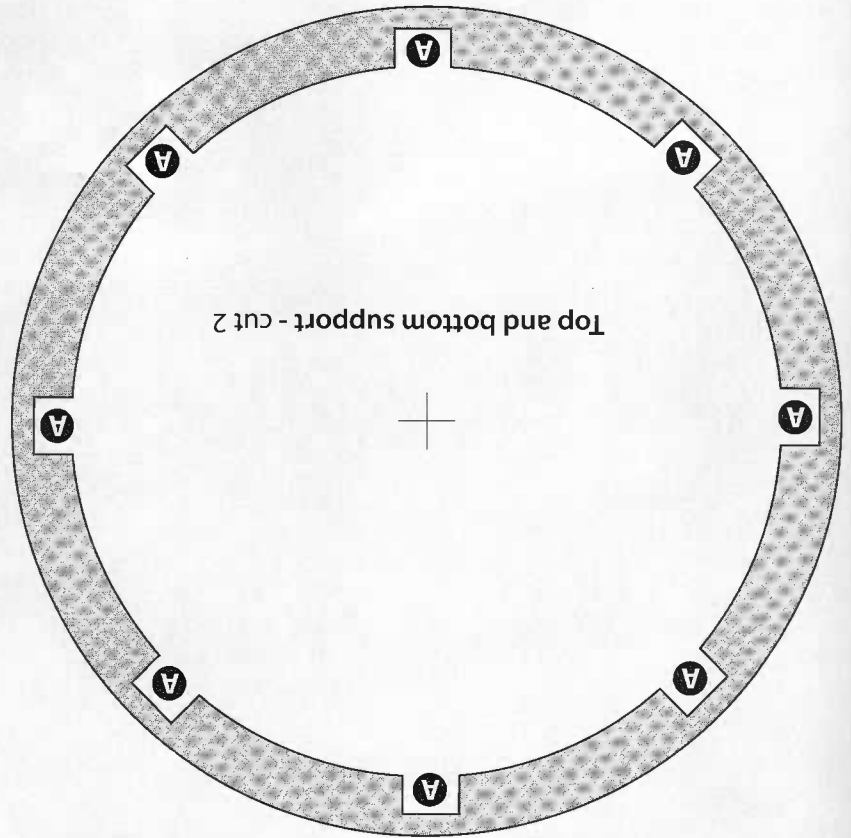

TIP REDUCE TEAR-OUT
 Put a piece of scrap wood beneath the workpiece and hold both pieces tightly together as you drill the blade-entry holes.

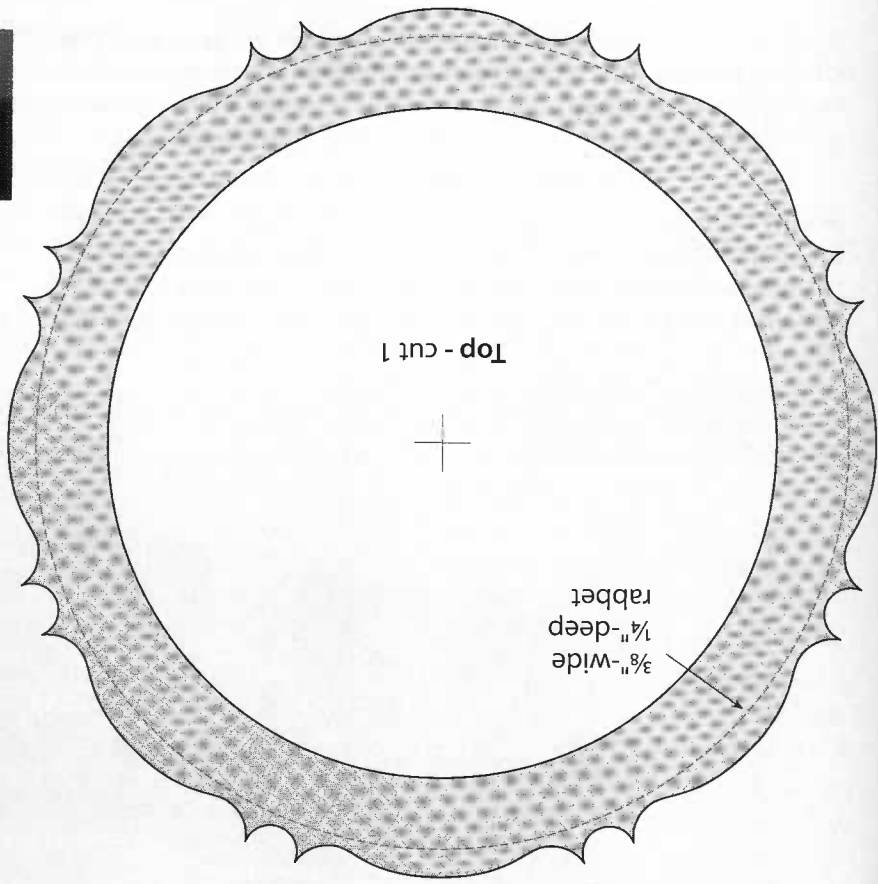

John A. Nelson is the author of Fox Chapel's popular Scroll Saw Workbook, available at www.foxchapelpublishing.com.